



INSTRUCTIONS

REMOTE CONTROL SOFTWARE

**RS-R8500**

Thank you for purchasing the RS-R8500 REMOTE CONTROL SOFTWARE.

Please read these instructions and the help file before installing and using this software.

## GETTING STARTED

This remote control software is designed to perform data setting and cloning for the IC-R8500 communications receiver.

### ◇ On-line help

Push the [F1] key to call up the on-line help. Or, click [Contents] in the [Help] menu.

### ◇ Software update information

Software update information will be available at the Icom America home page:

<http://www.icomamerica.com/>


### ◇ System requirements

To use this program, the following hardware and software are required:

- IBM PC compatible computer
- An RS-232C serial port
- Microsoft® Windows® 95 or Microsoft® Windows® Version 3.1 with appropriate DOS
- Intel i486DX4 processor or faster
- At least 16 MB RAM
- At least 10 MB of hard disk space
- At least 640 × 480 pixel display


## UNPACKING

- ① RS-232C cable (OPC-770) ..... 1  
② Software floppy disks ..... 1 set

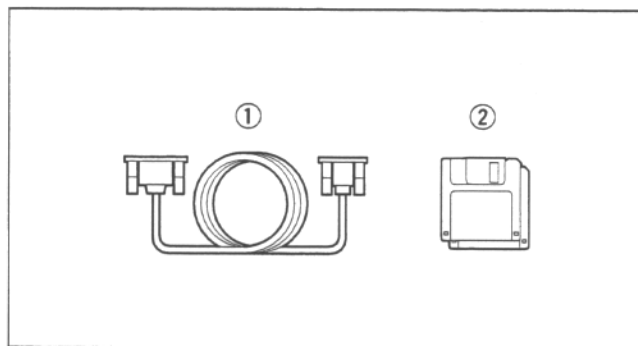

## HARDWARE INSTALLATION

Refer to the diagram below for connection.

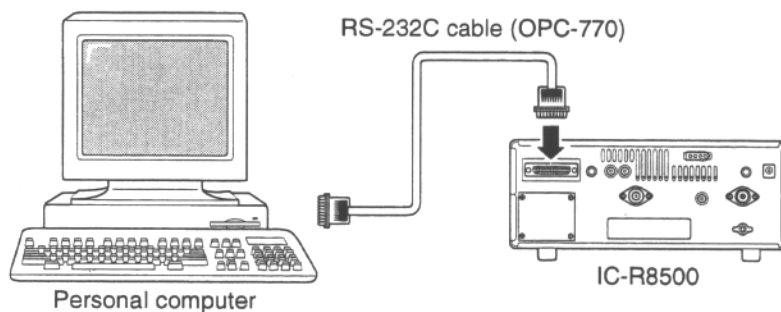


## SOFTWARE INSTALLATION

**NOTE:** Before using the program, make a backup copy of the original disk. After making a backup copy, keep the original disk in a safe place.

### ◆ Windows 95

- ① Boot up Windows.
  - Quit all applications when Windows is running.
- ② Insert the backup disk 1 into the appropriate floppy drive.
- ③ Select 'Run' from the [Start] menu.
- ④ Type the setup program name with full path name, then press the [Enter] key. (A:\SETUP [Enter])

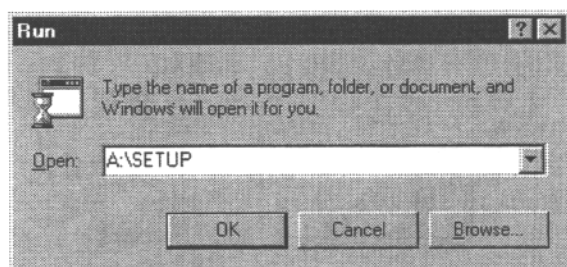

### ◆ Windows 3.1

- ① Boot up Windows.
  - Quit all applications when Windows is running.
- ② Insert the backup disk 1 into the appropriate floppy drive.
- ③ Select 'Run' from the File menu of the Program Manager.
- ④ Type the setup program name with full path name, then press the [Enter] key. (A:\SETUP [Enter])
- ⑤ Follow the prompts.
- ⑥ Program group 'RS-R8500' appears in the Program Manager.

- ⑤ Follow the prompts.
- ⑥ Program group 'RS-R8500' appears in the 'Programs' folder of the [Start] menu.

## SERIAL PORT SETTING

Make sure the RS-232C serial port is set correctly if the "Communication failed" dialog box appears.

- ① Before launching the program make sure the IC-R8500 power is turned on.
- ② Click the [POWER] button on the communications receiver screen to temporarily pause the program.
- ③ Select [Setting] in the [Option] menu to bring up the [RS-R8500 Option] dialog box.

- ④ Select the desired COM port number and baud rate.
- ⑤ Set the IC-R8500 CI-V address.
- ⑥ Click the [OK] button.

